

**Setting up your Zebra LP2824
Printer for using RS-232 communication**

Ver. 1.0, Code no. 20 752 234




Plug in the modified MINI GENDER CHANGER to the printer's RS-232 port and connect it to your PAT tester using PS/2 – RS232 serial communication cable.




NOTE: Use only supplied modified MINI GENDER CHANGER. Standard RS232 male-male communication adapter can cause fault on instrument's communication circuit.


1. Turn the PAT TESTER ON.
2. Use the UP / DOWN keys to select SETUP.

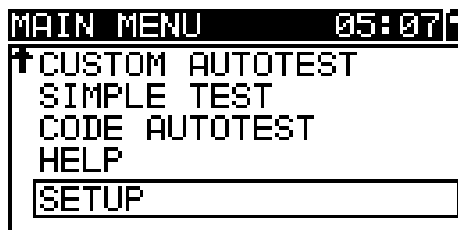

3. Enter SETUP menu using TEST button and move down to COMMUNICATION.

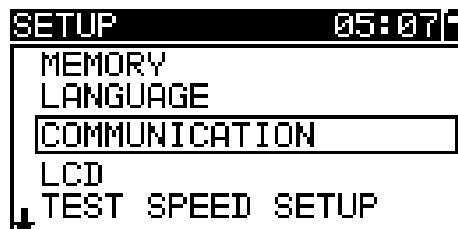


4. Enter to COMMUNICATION menu (TEST button).

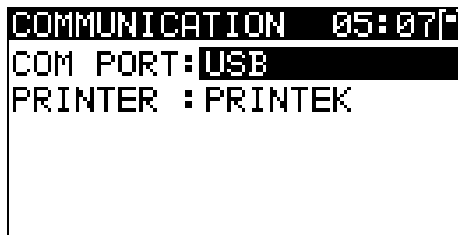

5. Select COM PORT and set to RS232 using TEST button.



6. Select PRINTER and set to ZEBRA using TEST button.

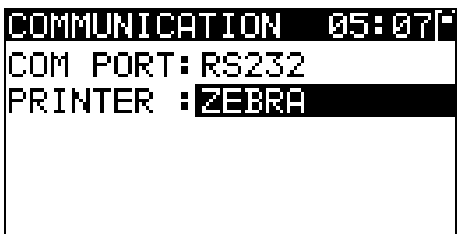

7. Turn your Zebra printer ON.
8. You are now ready to use Zebra LP2824 printer.

