

Setting up your Zebra LP2824 Printer to work with Bluetooth


Ver. 1.0, Code no. 20 752 233



Plug in the Adaptor cable to the Zebra Printer.




1. Plug the printer`s A1436 BT dongle into your PAT TESTER either the MI 3311 Gamma Pat or the MI 3309 Delta Pat.
2. Turn the PAT TESTER ON.

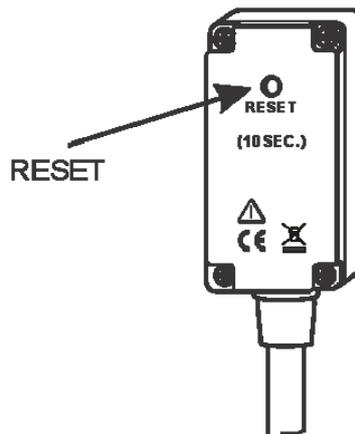

It is recommended to reset the printer`s A1436 BT dongle before proceeding with further steps. A1436 BT dongle can be reset by holding the Reset for at least 10 seconds as shown on the right picture.

3. Use the UP / DOWN keys to select SETUP.

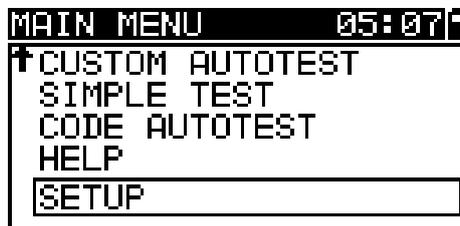

4. Enter SETUP menu using TEST button and move down to COMMUNICATION.

```

SETUP 05:07
MEMORY
LANGUAGE
COMMUNICATION
LCD
TEST SPEED SETUP

```

5. Enter to COMMUNICATION menu (TEST button).

```

COMMUNICATION 05:07
COM PORT:RS232
PRINTER : PRINTEK

```

6. Select COM PORT and set to BT DONGLE using TEST button.

```

COMMUNICATION 05:09
COM PORT:BT DONGLE
PRINTER : PRINTEK
INIT. BT DONGLE

```

7. Select PRINTER and set to ZEBRA BT using TEST button.

```

COMMUNICATION 05:09
COM PORT:BT DONGLE
PRINTER :ZEBRA BT
PRN NAME:
INIT. BT DONGLE
INIT. BT DONGLE (PRN)

```

8. Move down to INIT. BT DONGLE (PRN) and press TEST button.
(Make sure that printer's BT Dongle is plugged to the instrument).

```

COMMUNICATION 05:10
COM PORT:BT DONGLE
PRINTER : ZEBRA BT
PRN NAME:
INIT. BT DONGLE
INIT. BT DONGLE (PRN)


```

```

COMMUNICATION 06:51
EXTERNAL BT DONGLE
SEARCHING...
OK!

```

9. Plug instrument's BT Dongle to the instrument and initialized printer's BT Dongle to the Zebra printer.

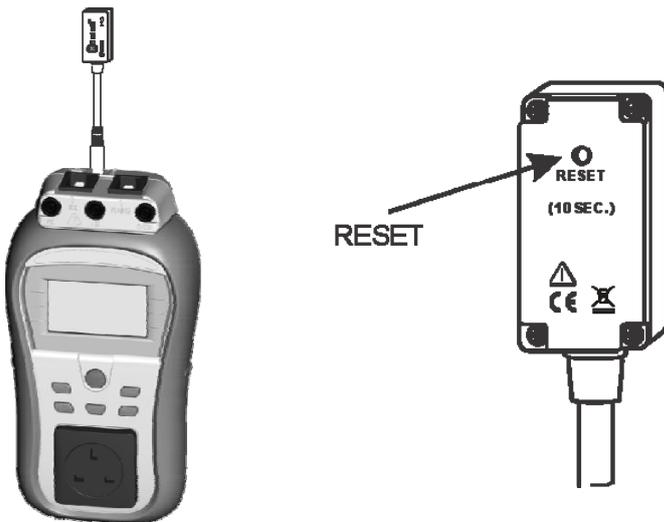

It is recommended to reset the instrument's A1436 BT dongle before proceeding with further steps. A1436 BT dongle can be reset by holding the Reset for at least 10 seconds as shown on the right picture.

10. Select INIT. BT DONGLE option and press TEST button.

```

COMMUNICATION 05:10
COM PORT:BT DONGLE
PRINTER :ZEBRA BT
PRN NAME:
INIT. BT DONGLE
INIT. BT DONGLE (PRN)
  
```

```


COMMUNICATION 08:51
EXTERNAL BT DONGLE
SEARCHING...
OK!
  
```

11. Select PRN NAME and press TEST button. Make sure that Zebra BT printer is ON and printer's BT Dongle is connected.

```

COMMUNICATION 05:10
COM PORT:BT DONGLE
PRINTER :ZEBRA BT
PRN NAME:
INIT. BT DONGLE
INIT. BT DONGLE (PRN)
  
```

12. A list of available BT devices will be displayed. Select ZebraPRN and press TEST button to confirm.

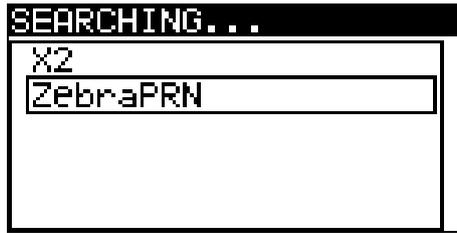

13. If everything is set right, COMMUNICATION screen should look exactly like figure below.



14. You are now ready to use Zebra LP2824 printer.

